



**CUBIC6 - E2 QUICK REFERENCE**

IP2011  
rev. 2008-10-13


**!** Before installing the product, carefully read the instructions.  
**1. ELECTRICAL CONNECTIONS FOR STANDARD INSTALLATION**

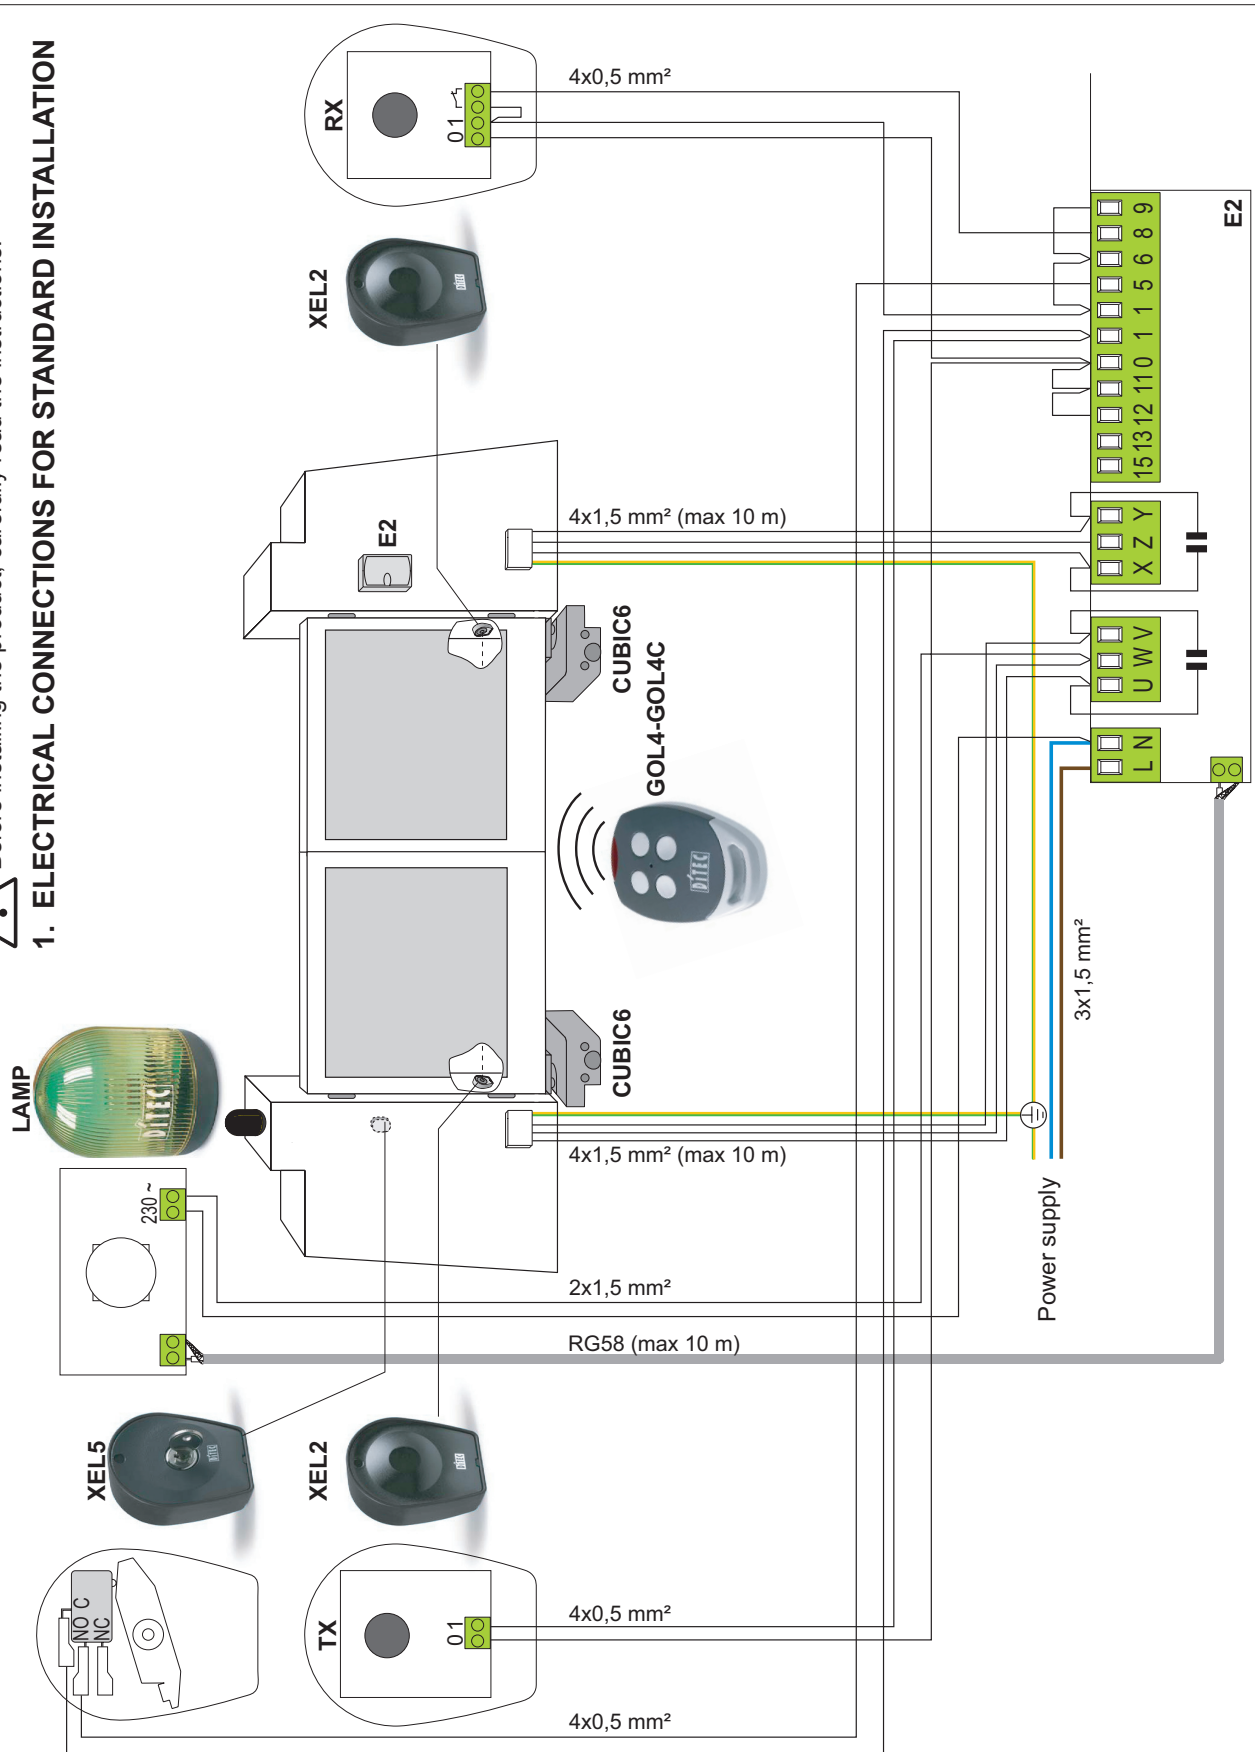


## 2. LIMIT SWITCHES CONNECTION (CUBIC6FM OPTIONAL)

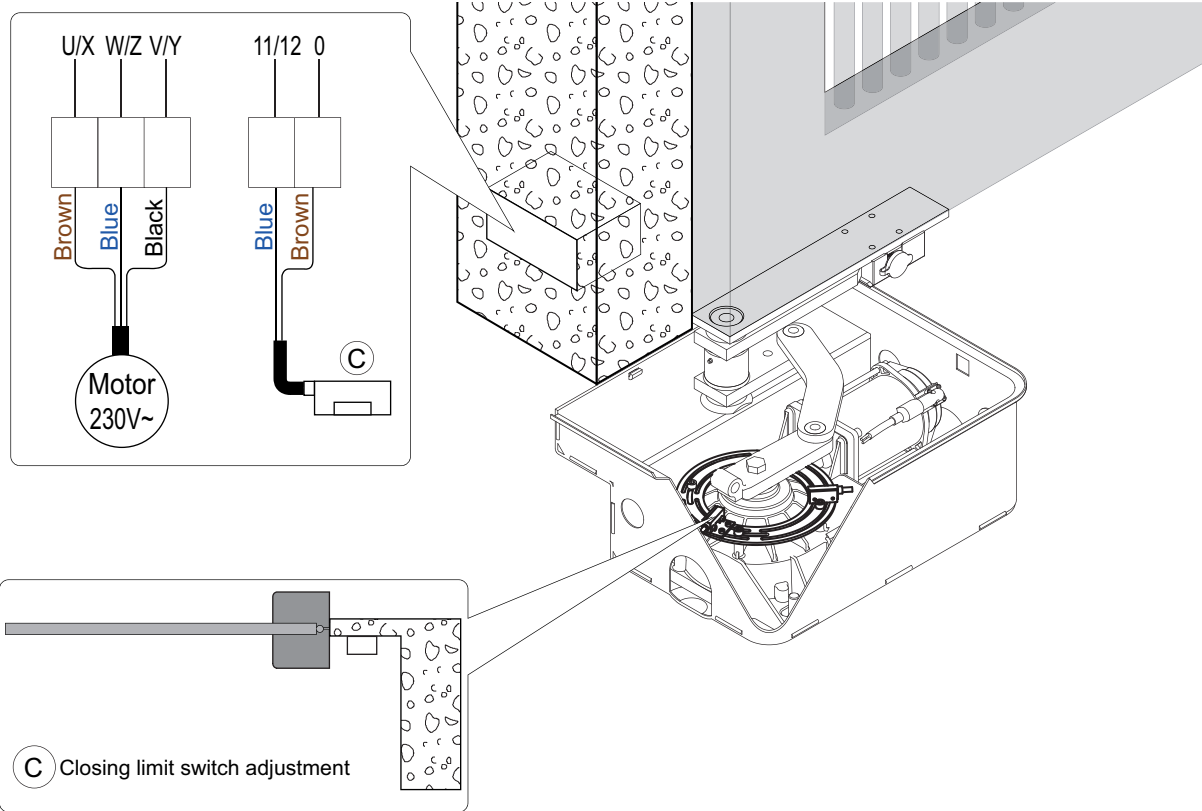


## 3. CUBIC6 MOTORS CONNECTION

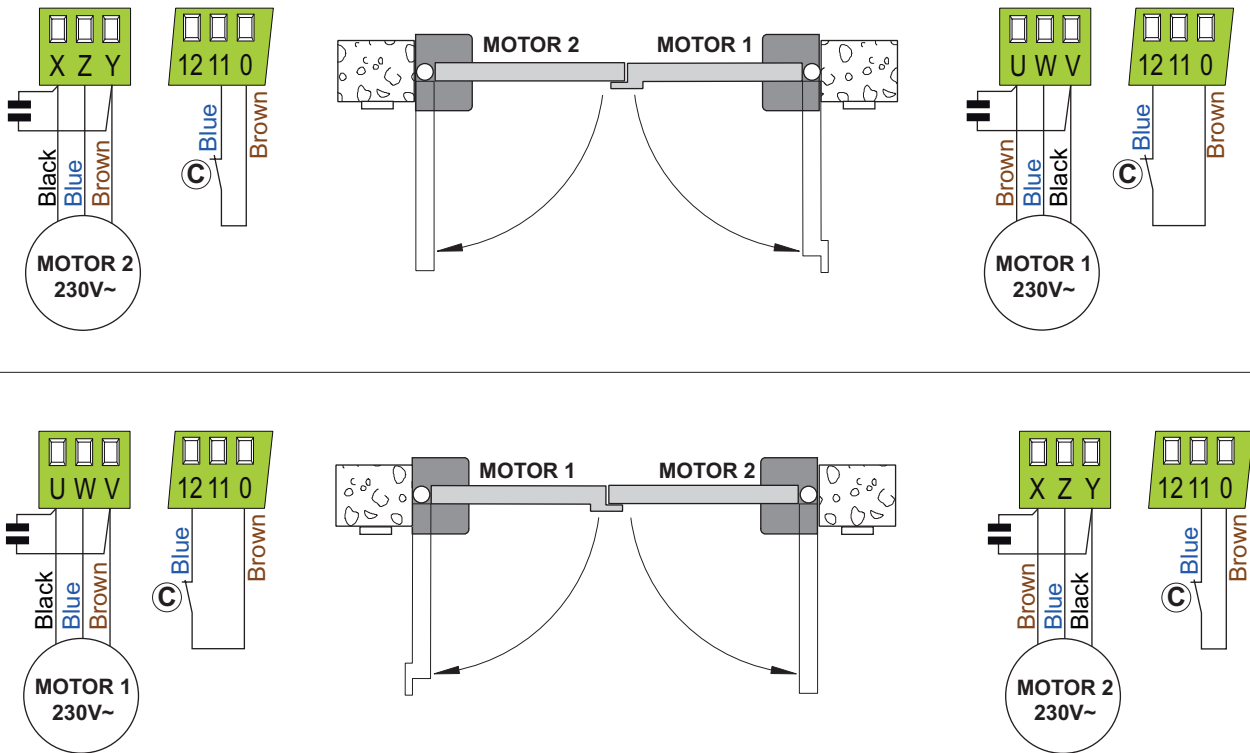

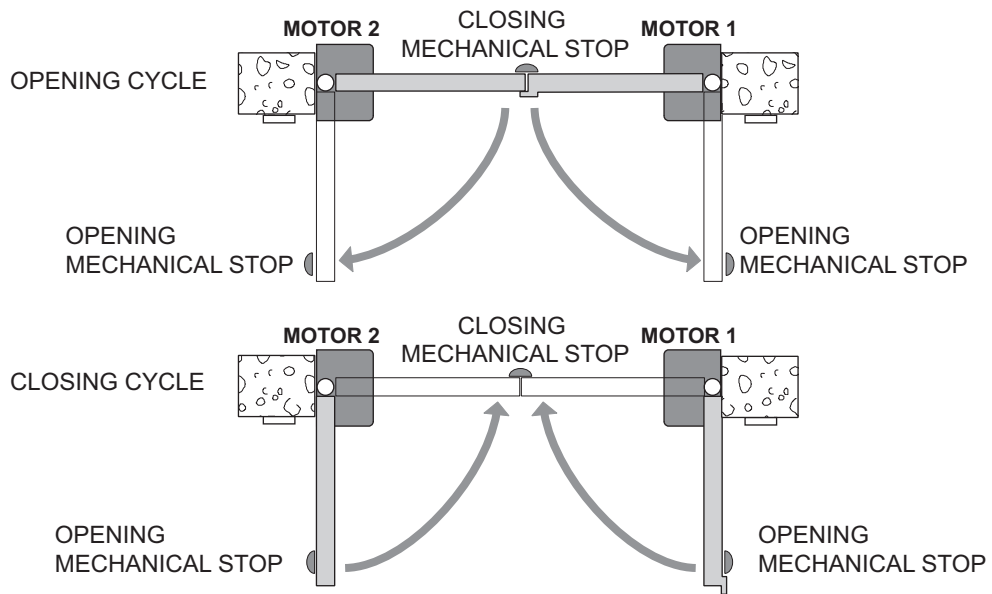

## 4.1 USAGE WITHOUT LIMIT SWITCHES

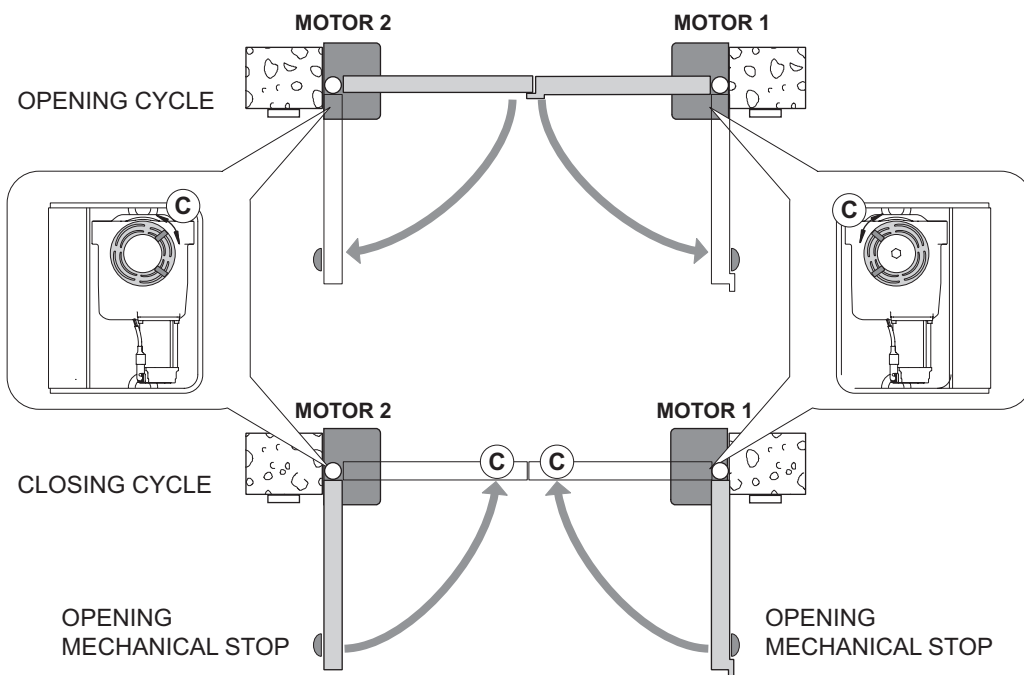


## 4.2. USAGE WITH CLOSING STOP LIMIT SWITCHES (OPTIONAL)




	TM = MAX
	Closing limit switch setting


## 5. E2 STANDARD SETTING

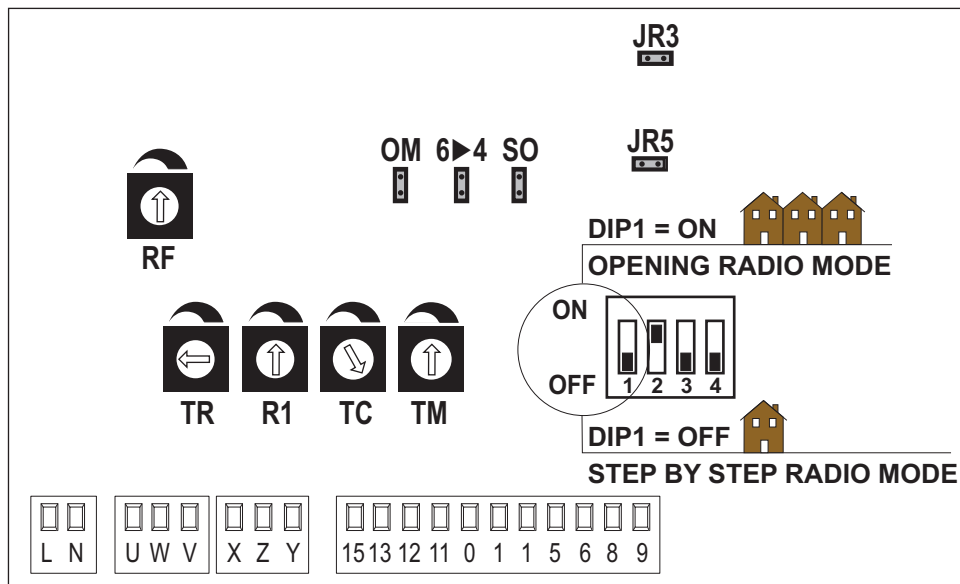

## 6. RADIO ENABLING

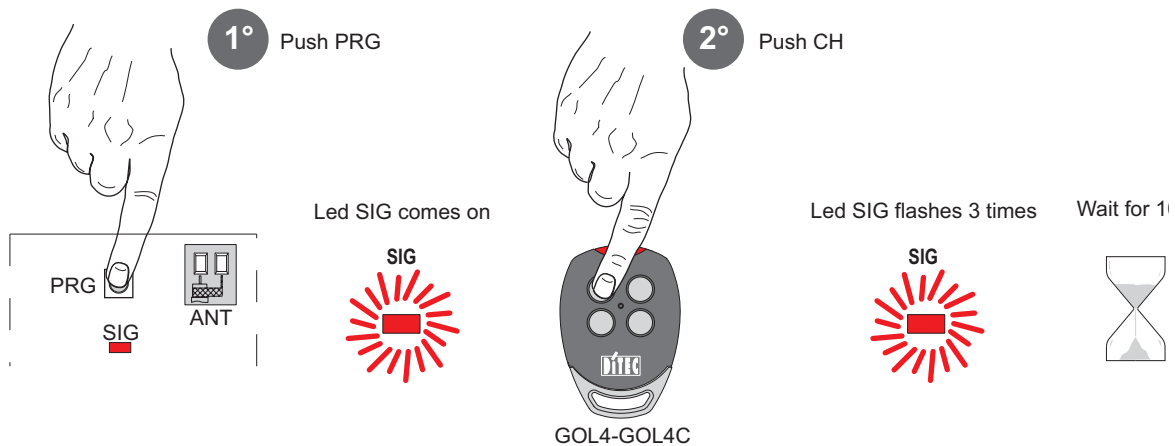

## 7. AUTOMATIC CLOSING SETTING

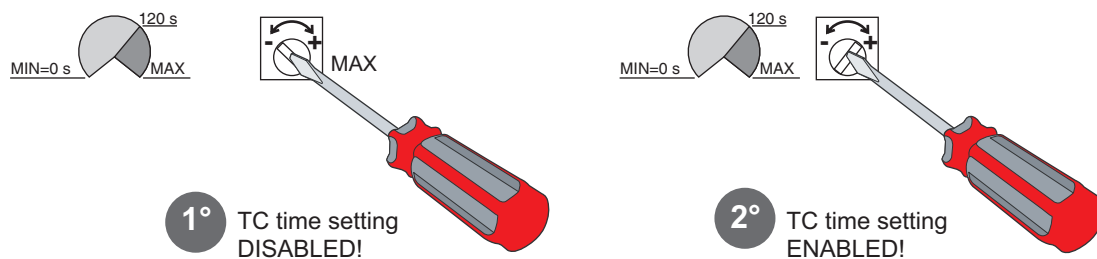

For different setting and further information consult the CUBIC automation instruction manual, the E2 control panel instruction manual and BIXLR22 radio instruction manual.

DITEC S.p.A.  
Via Mons. Banfi, 3 - 21042 Caronno Pertusella (VA) - ITALY  
Tel. +39 02 963911 - Fax +39 02 9650314  
www.ditec.it - ditec@ditecva.com