



CUBIC6H - VIVAH QUICK REFERENCE

IP1956
rev. 2008-08-27

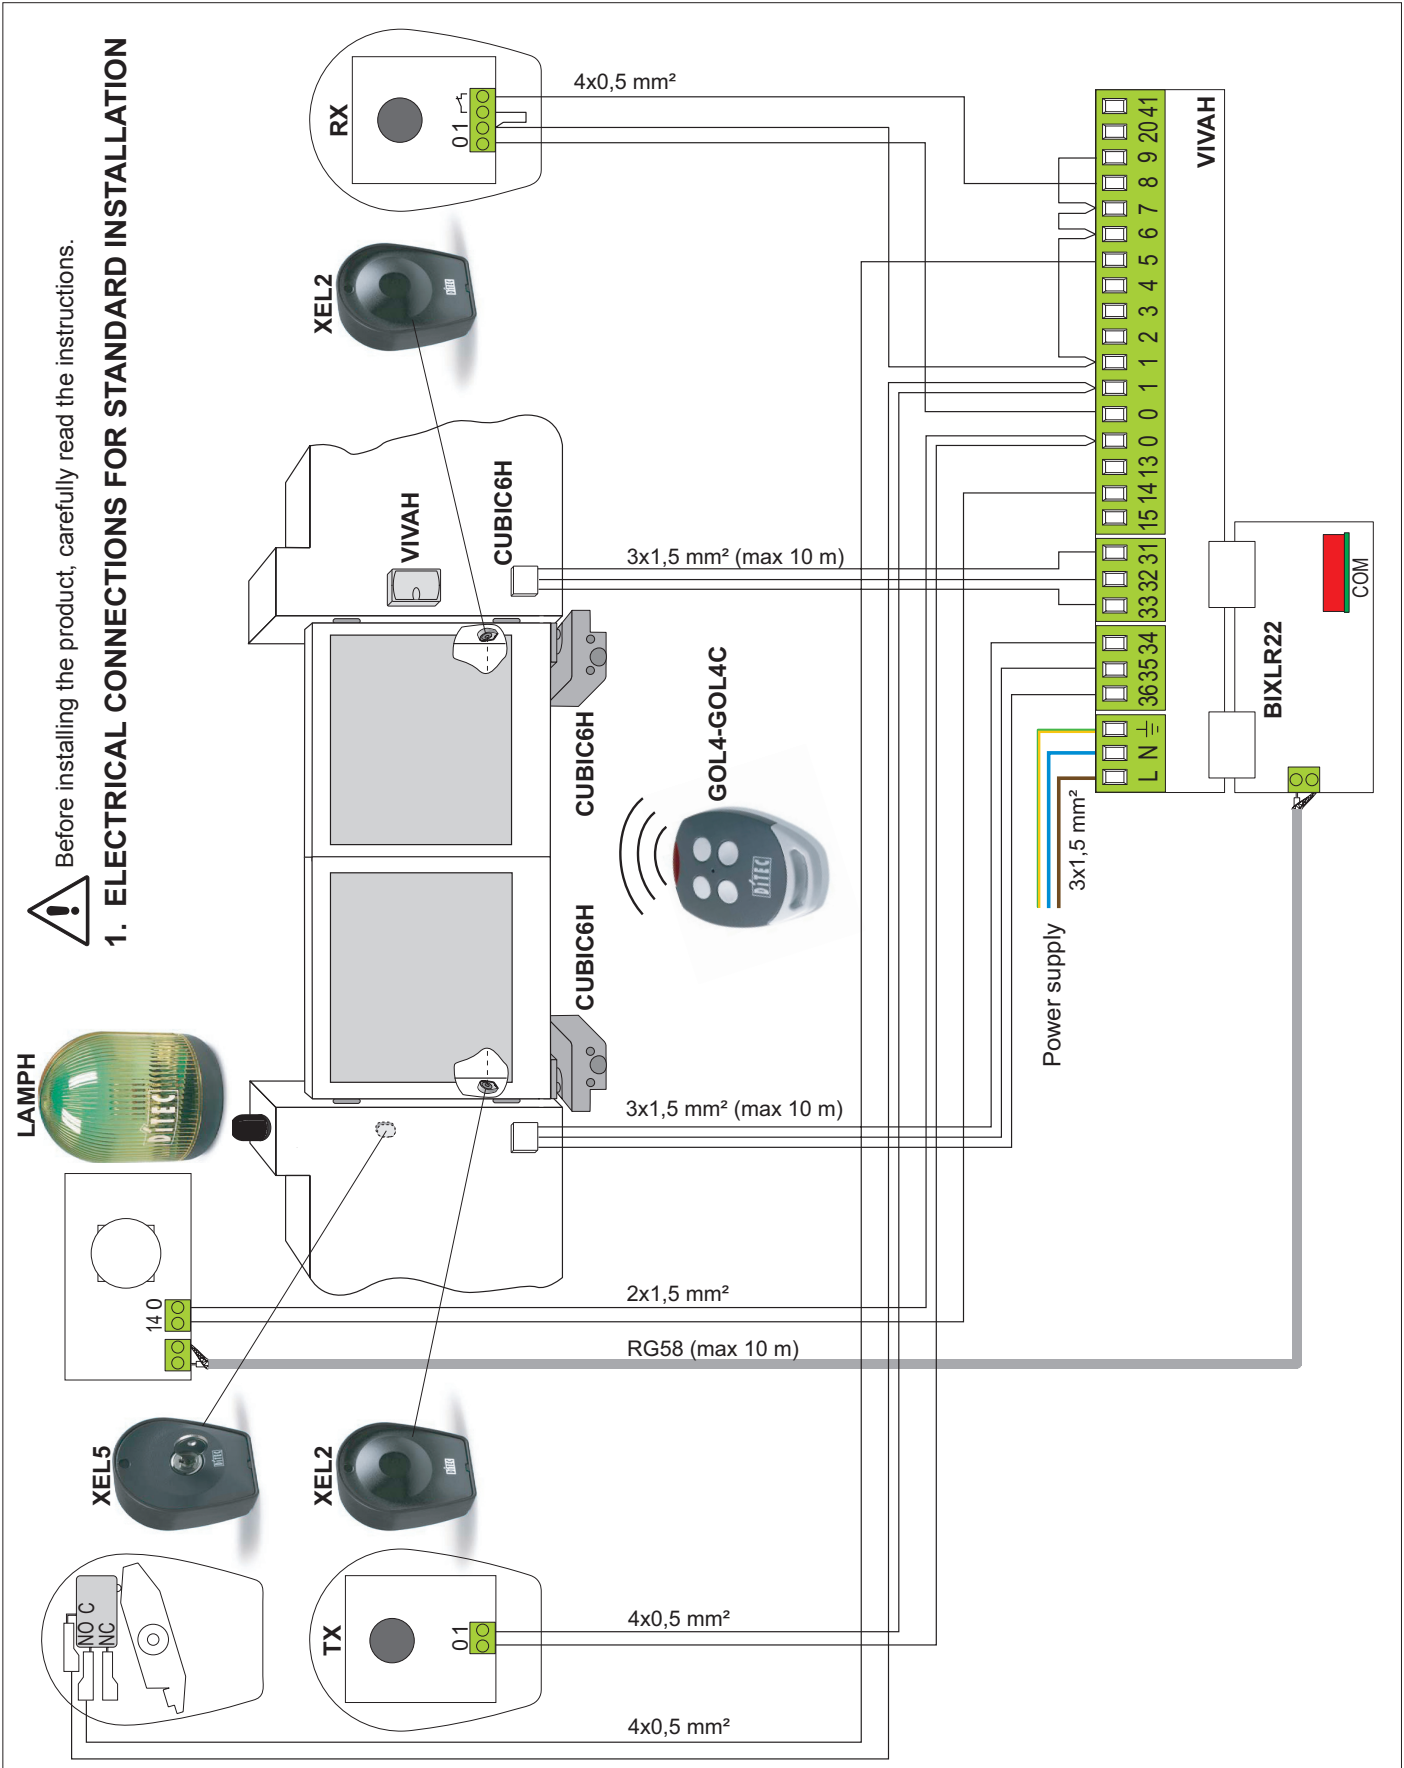


2. LIMIT SWITCHES CONNECTION (OPTIONAL)

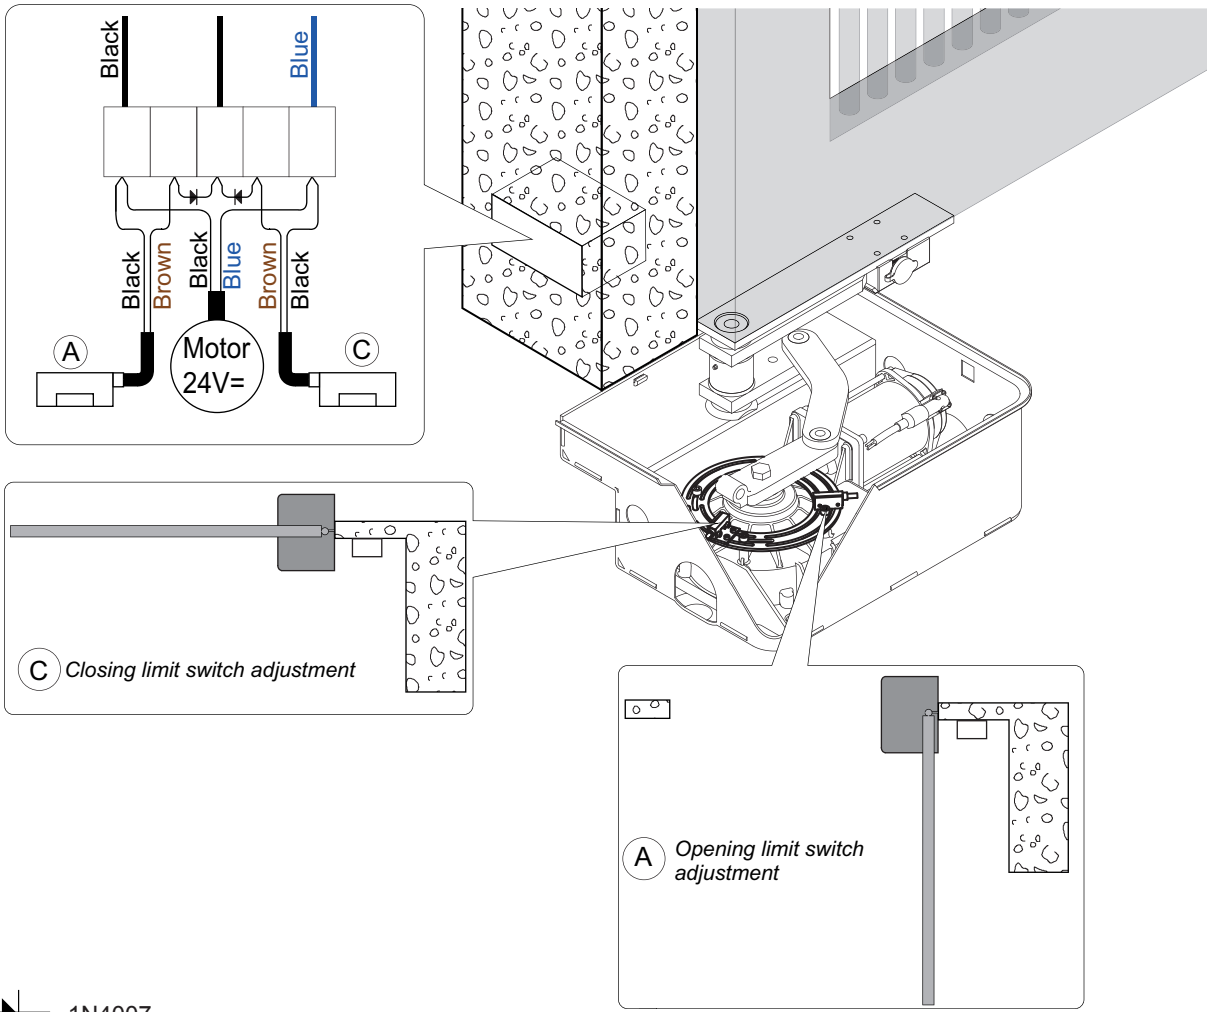


1N4007

3. CUBIC6H MOTORS CONNECTION

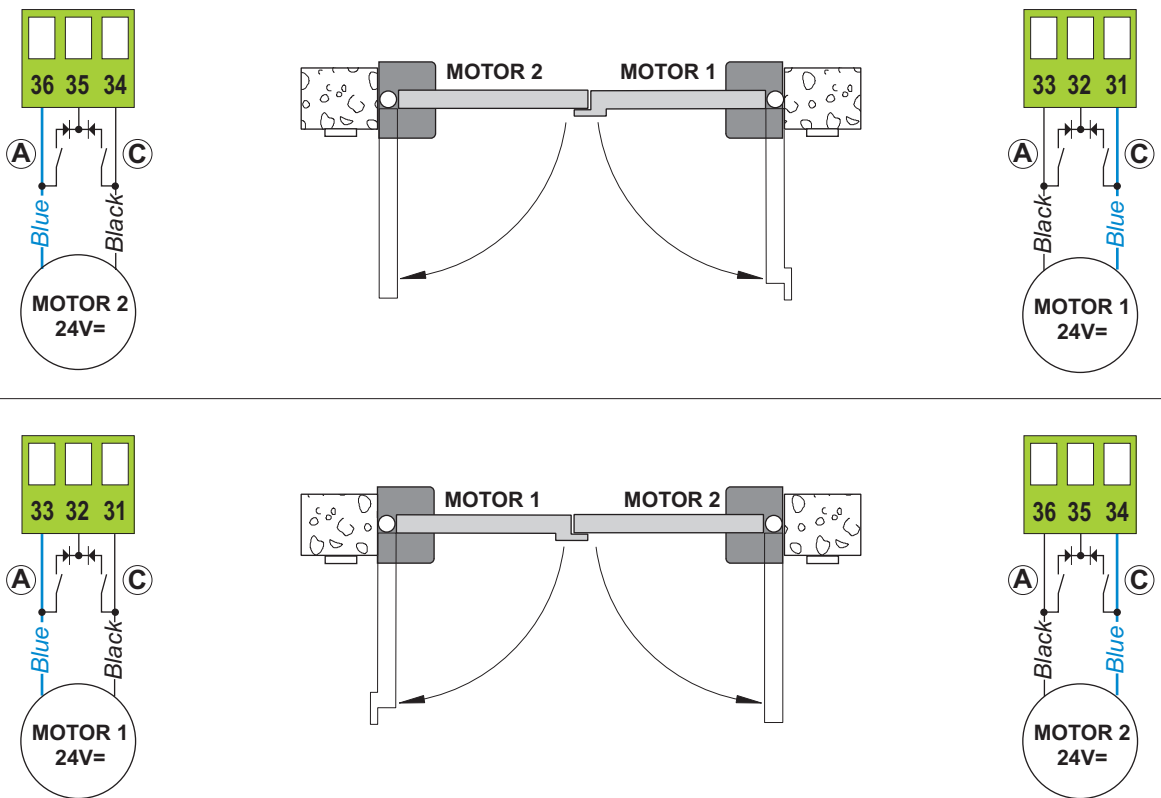


4.1 USAGE WITHOUT LIMIT SWITCHES

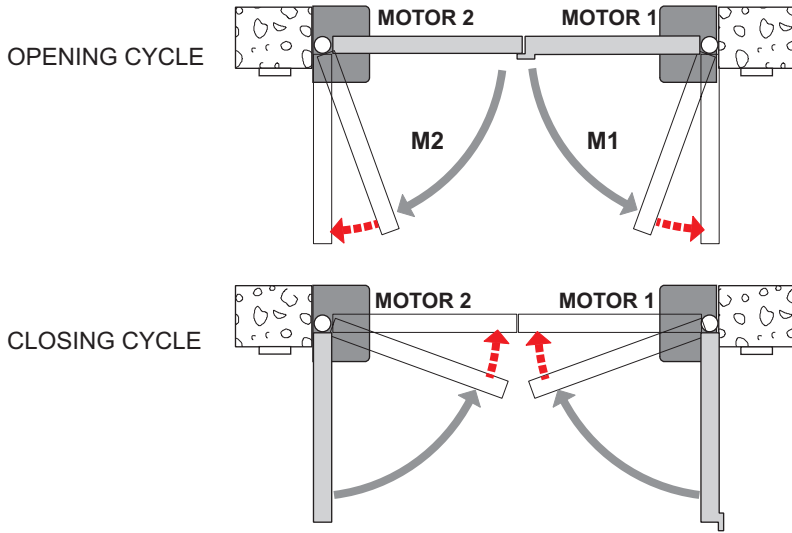


	FC = ON
1°	VM speed setting
2°	M1 time setting
2°	M2 time setting
	Slow down speed after M1/M2 time setting.

4.2. USAGE WITH SLOW DOWN LIMIT SWITCHES (OPTIONAL)

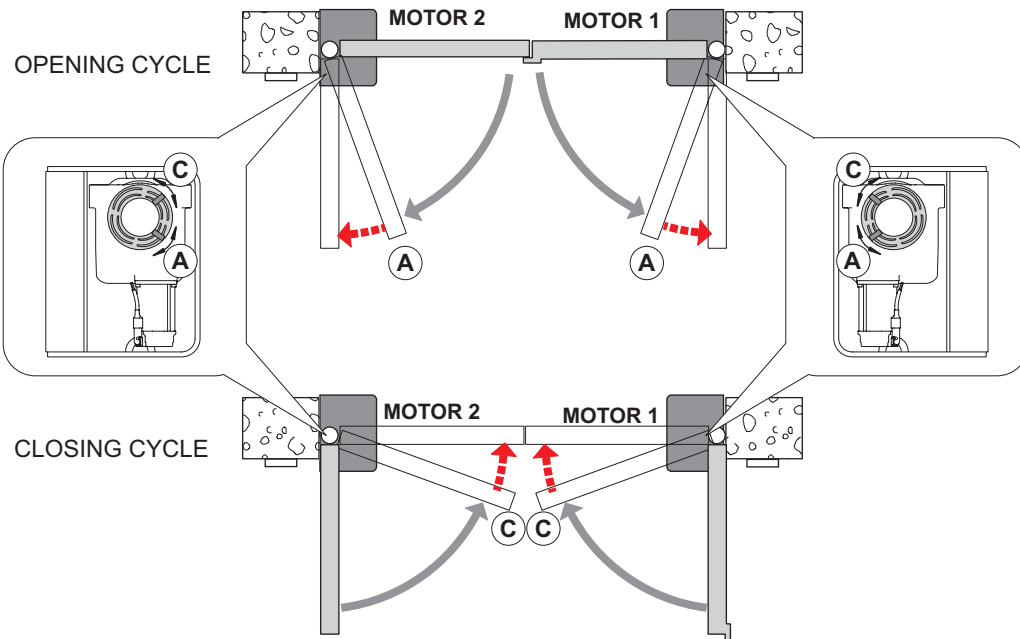


	FC = ON
1°	VM speed setting
	M1 = MAX
	M2 = MAX
2°	Opening limit switch setting
3°	Closing limit switch setting
	Slow down speed after limit switch activation

4.3 USAGE WITH STOP LIMIT SWITCHES (OPTIONAL)

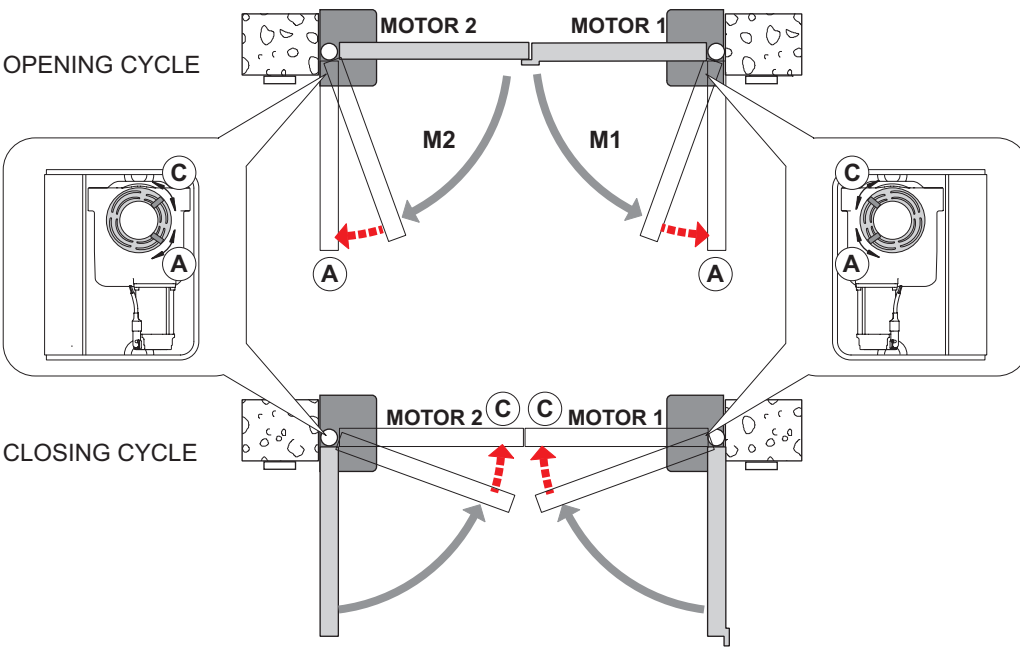

	FC = OFF
1°	VM speed setting
2°	M1 time setting
2°	M2 time setting
3°	Opening limit switch setting
4°	Closing limit switch setting
	Slow down speed after M1/M2 time setting


5. VIVAH STANDARD SETTING

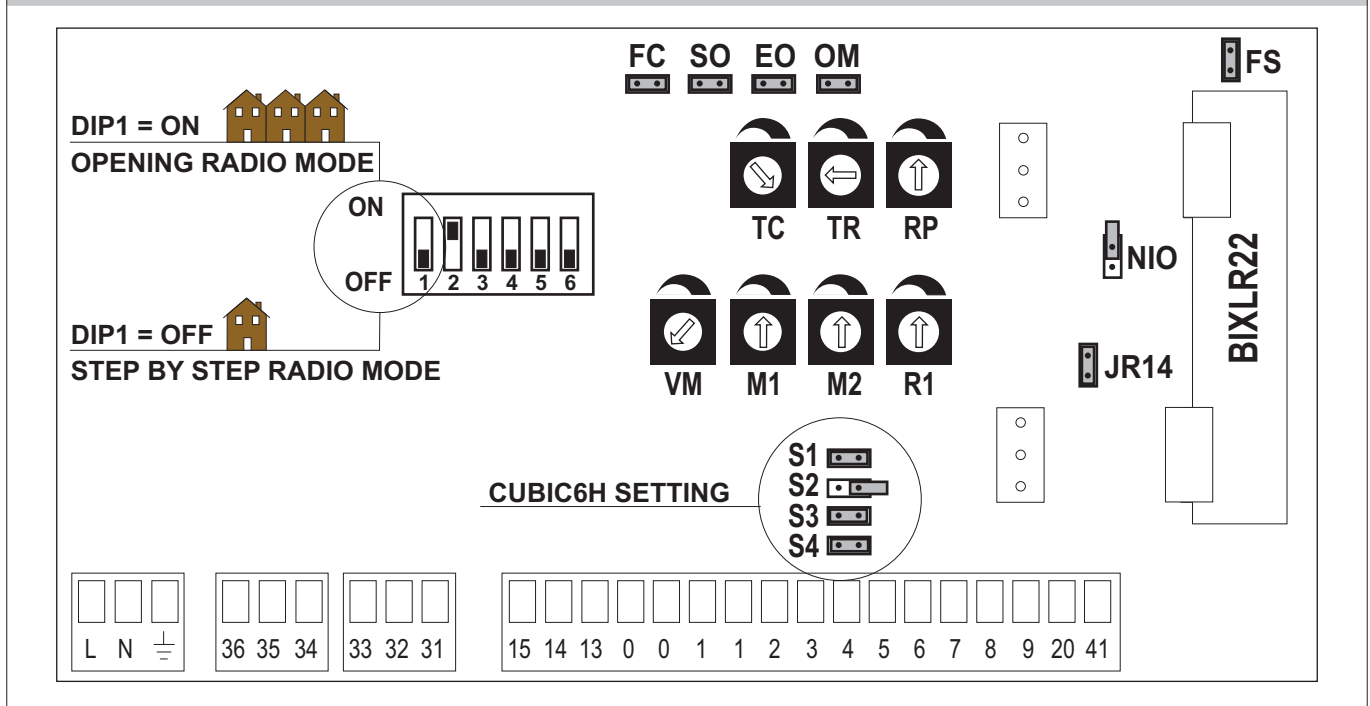

6. RADIO ENABLING



7. AUTOMATIC CLOSING SETTING

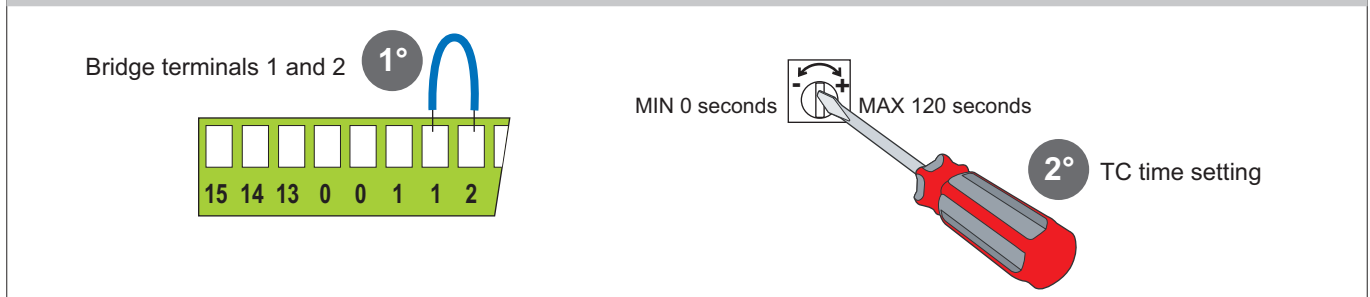

For different setting and further information consult the CUBIC automation instruction manual, the VIVAH control panel instruction manual and BIXLR22 radio instruction manual.